

# EDEN ROC GARAGE DOORS

CODING INSTRUCTIONS: Guardian Remotes (303mHz & 433 Mhz)



---

## CODE LEARNING

---

**\*MAKE SURE YOUR GARAGE DOOR IS CLOSED\***

1. PUSH **RADIO SET BUTTON** AT THE BACK OF DRIVE UNIT – COURTESY LIGHT WILL COME ON.
2. PUSH THE **HANDSET BUTTON** YOU WISH TO OPERATE THE DOOR TWICE. COURTESY LIGHT WILL FLASH TWICE.
3. NOW TEST BY PRESSING THE BUTTON ON THE REMOTE – THE DOOR SHOULD **OPEN**.

---

## CODE DELETING

---

1. HOLD **RADIO SET BUTTON** FOR **5 SECONDS**. ALL MEMORIES OF YOUR REMOTES (INCLUDING LOST REMOTES) WILL BE DELETED – COURTESY LIGHT WILL FLASH 7 TIMES.
2. TEST BY PRESSING BUTTON ON A PREVIOUSLY CODED REMOTE – THE MOTOR SHOULD NOT RESPOND.

